




MODEL A / A

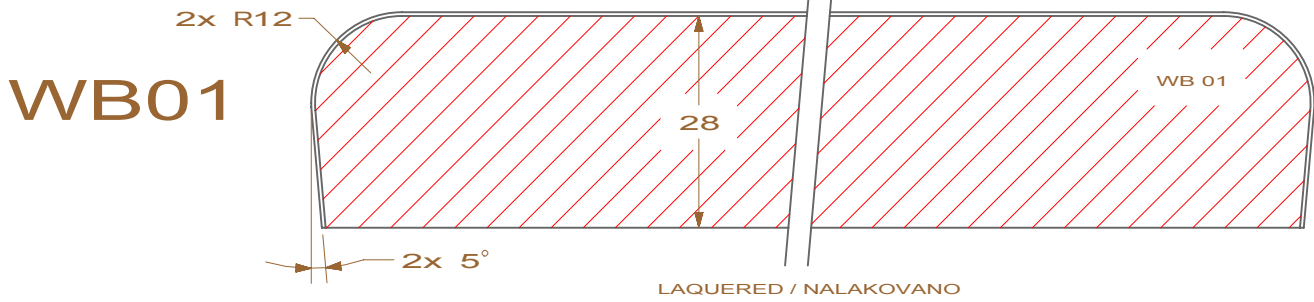


MODEL A / A

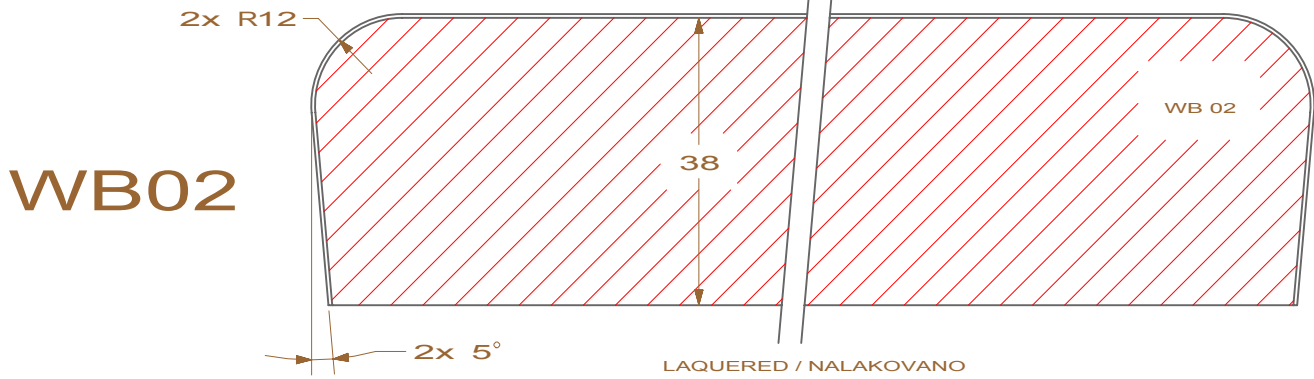


MODEL A

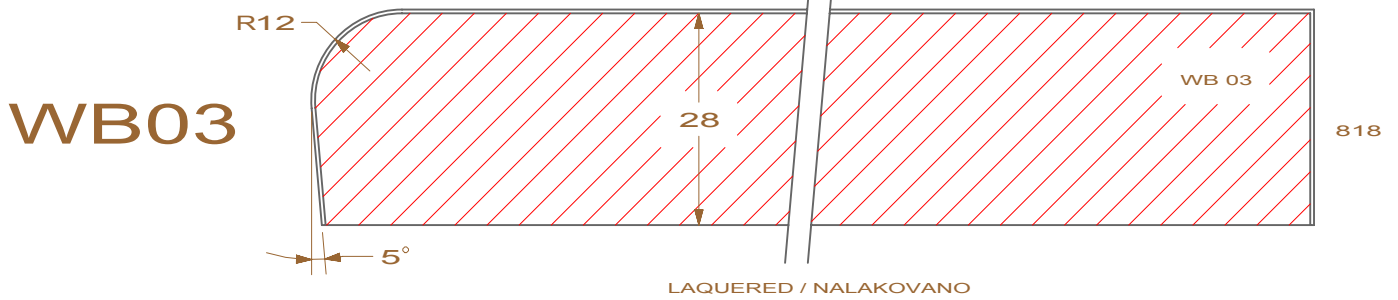


MODEL A

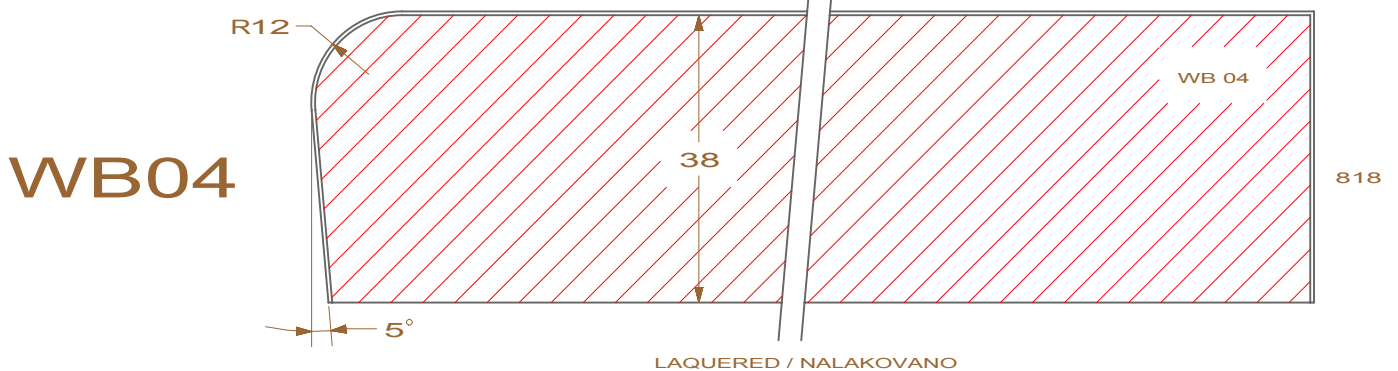


MODEL 180°

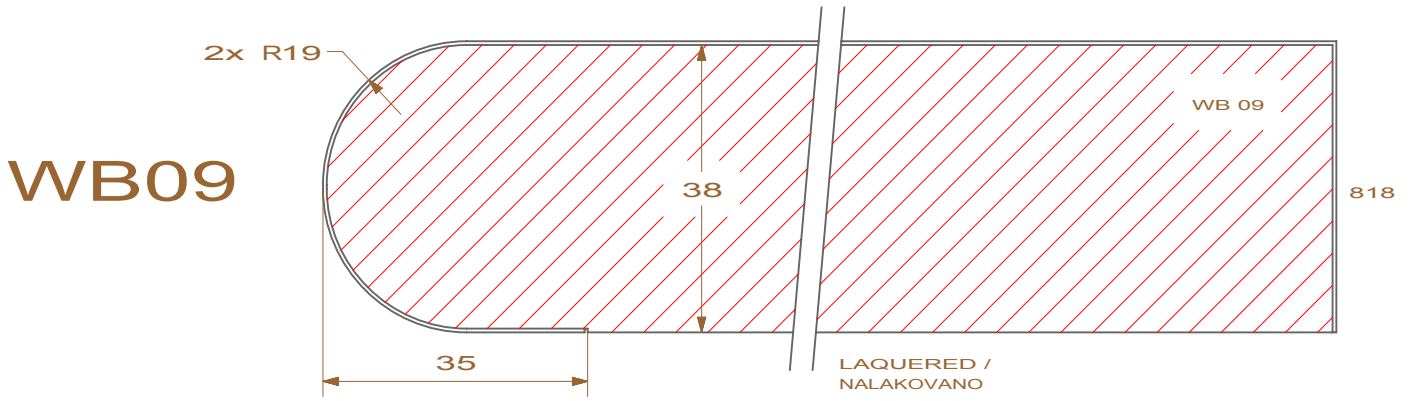


MODEL 180° / 180°

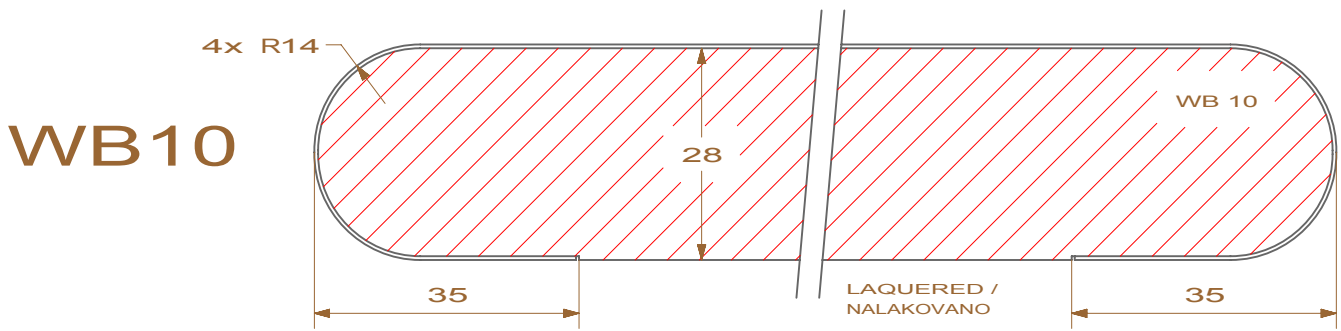


MODEL 180° / 180°

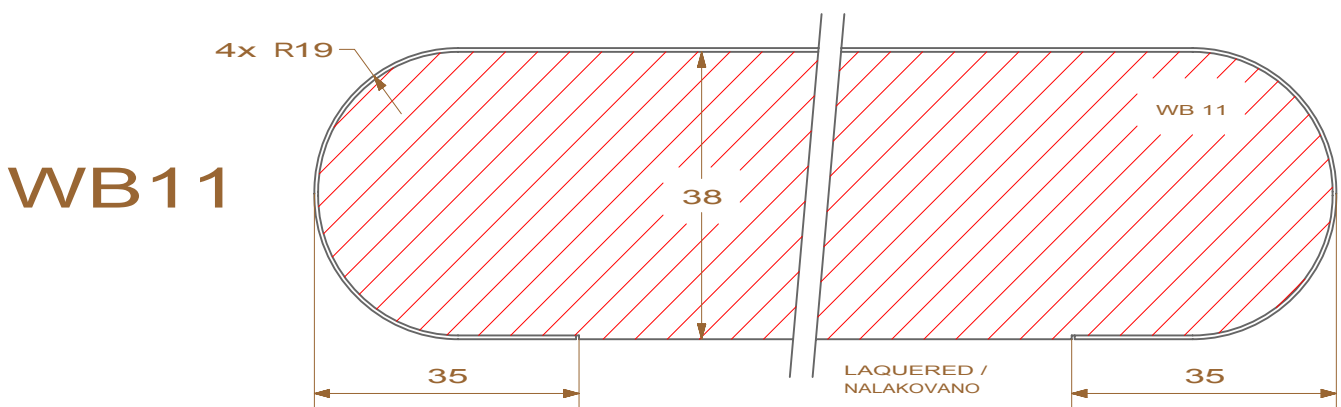


MODEL C

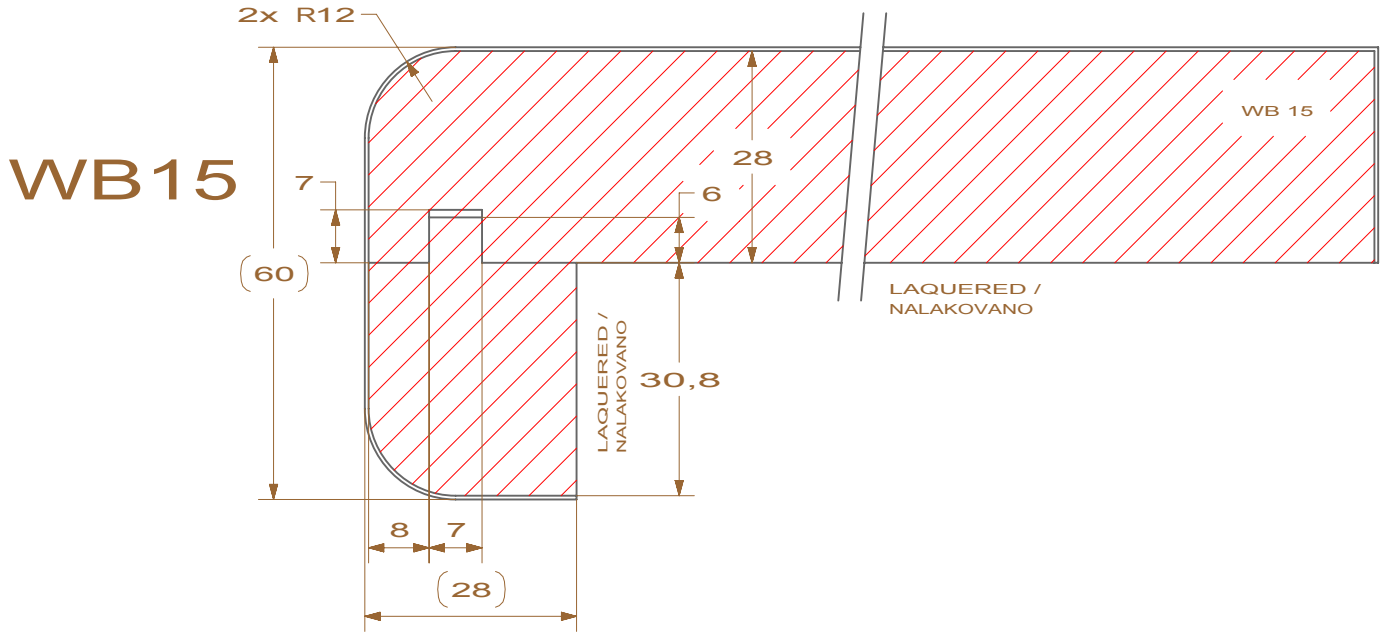


MODEL C / C

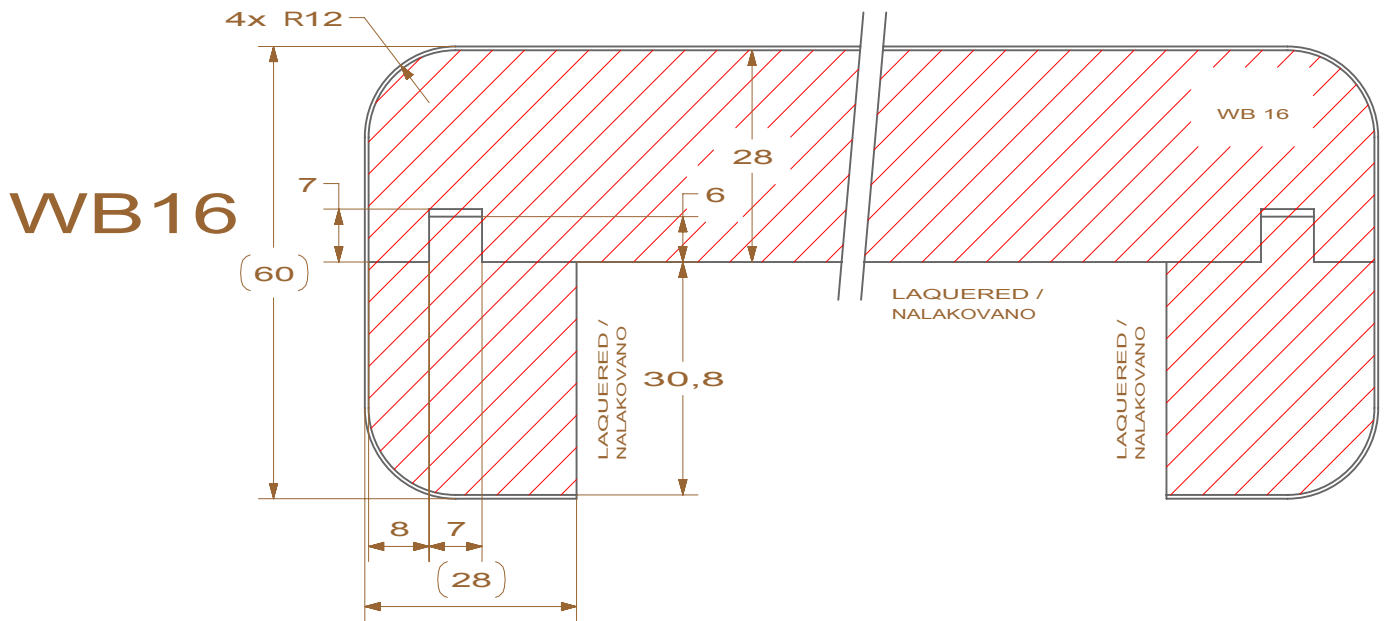


MODEL U

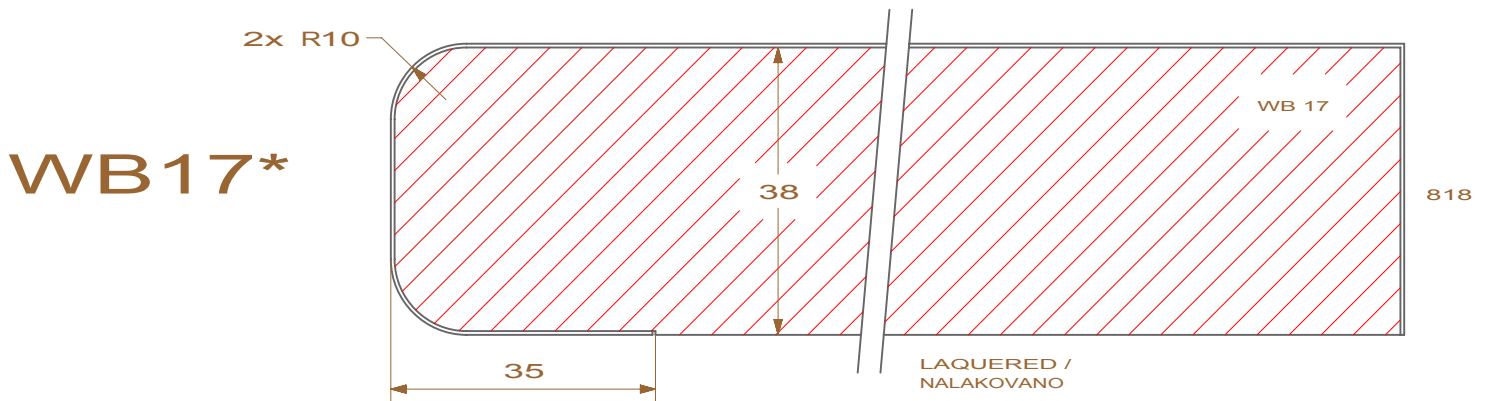


MODEL U / U

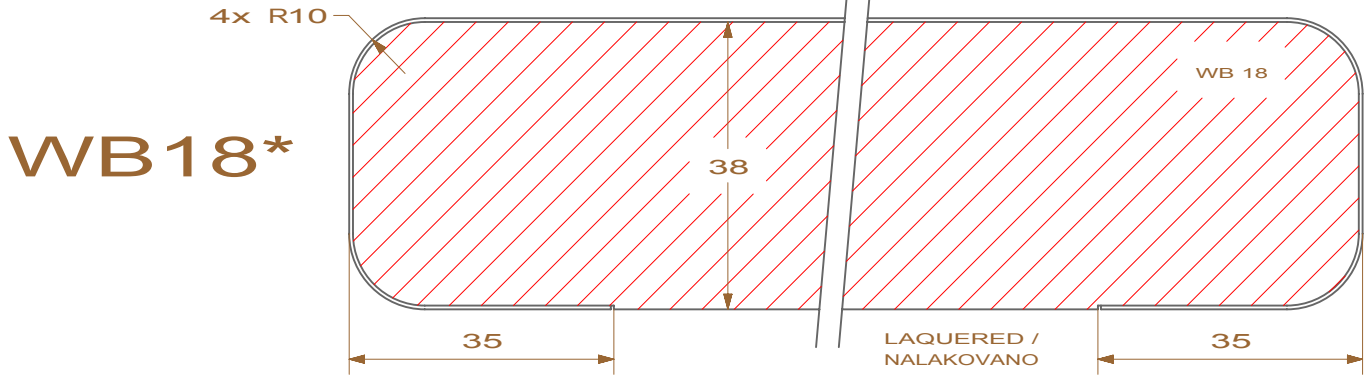


MODEL 180°

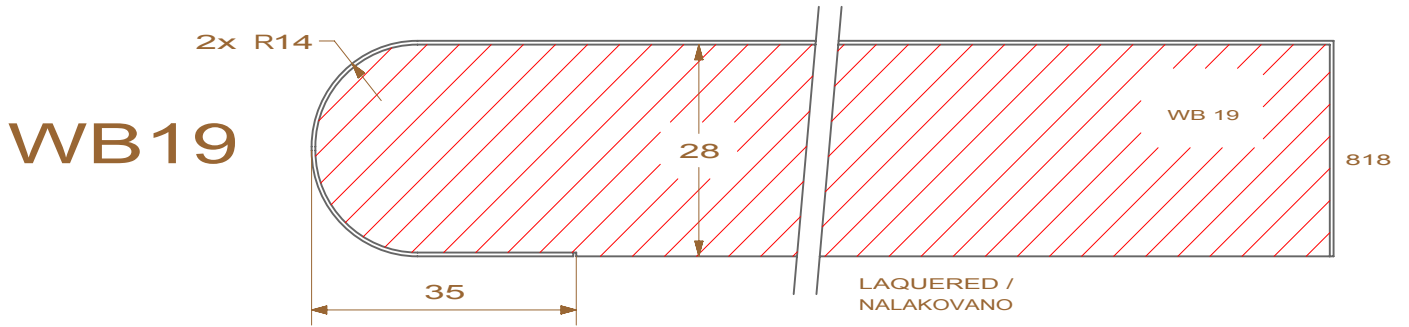


MODEL U / U

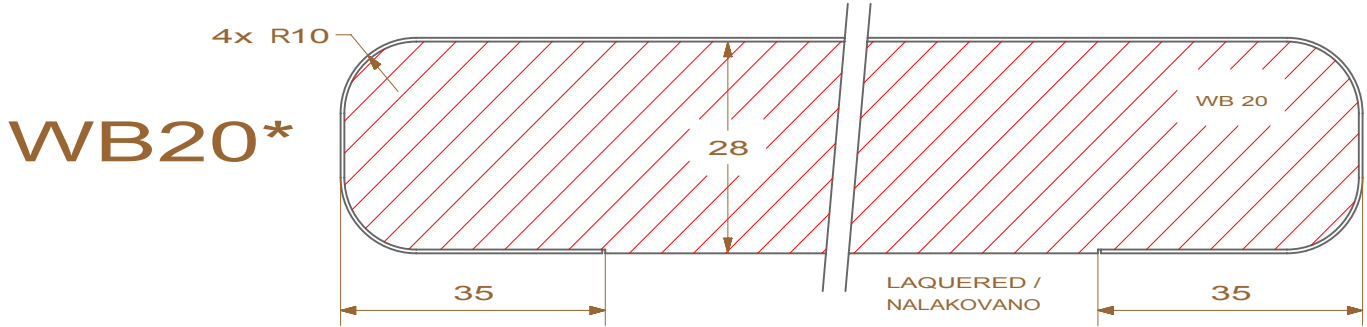


MODEL U

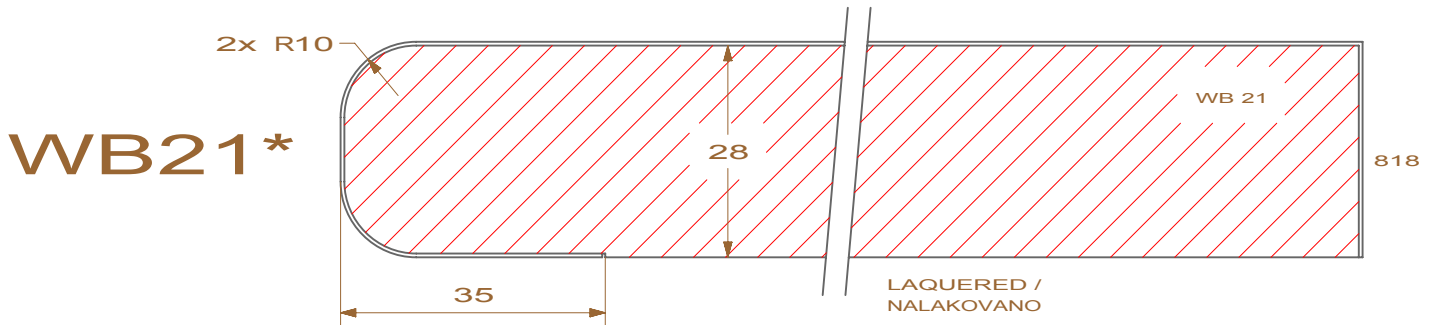


MODEL 180° / 180°

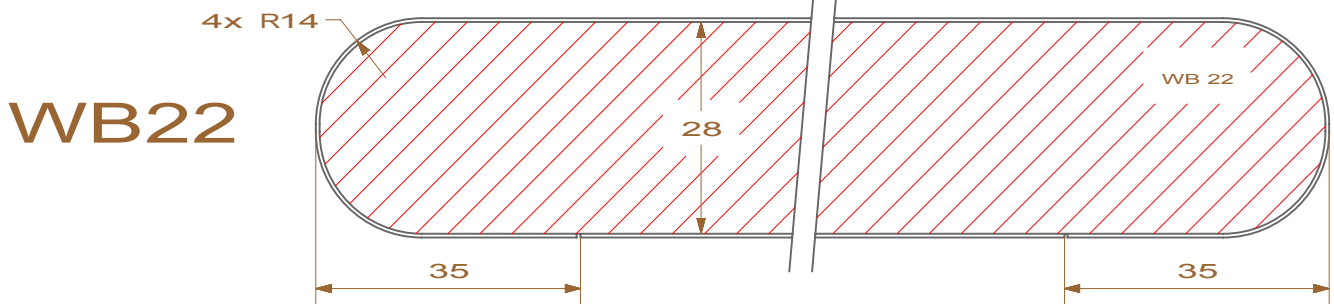


MODEL 180°



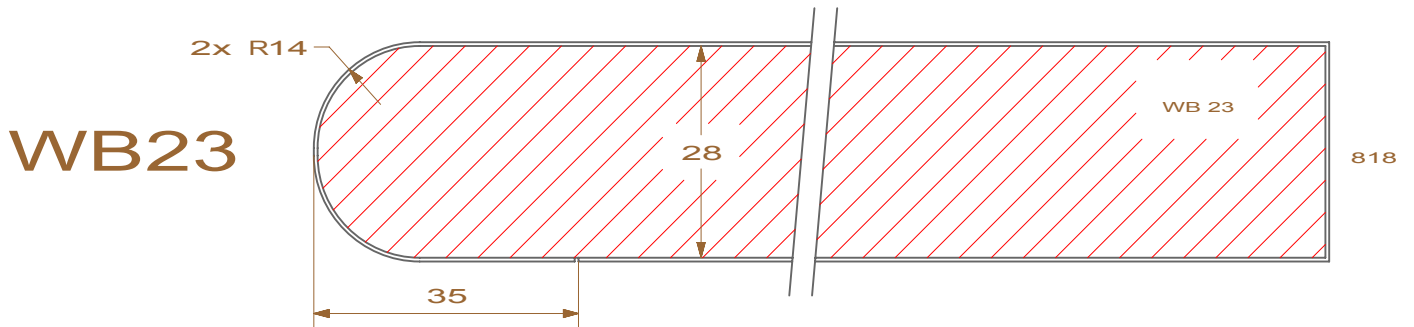


MODEL A

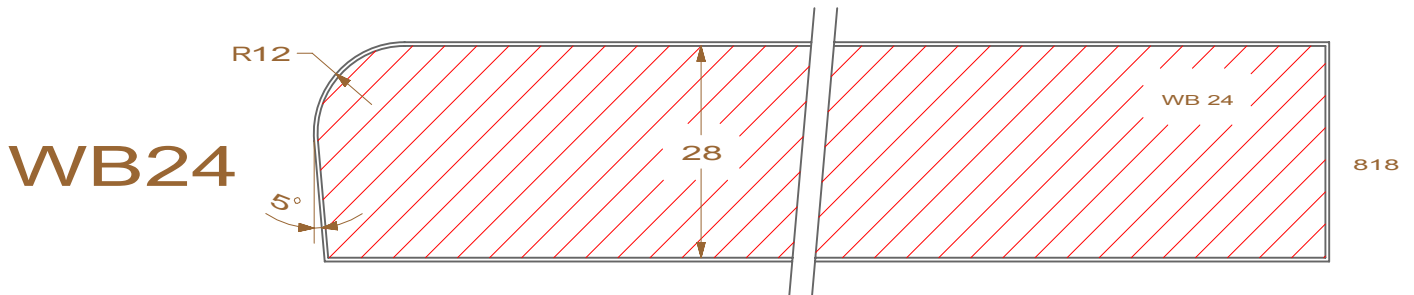


MODEL 180° / 180°

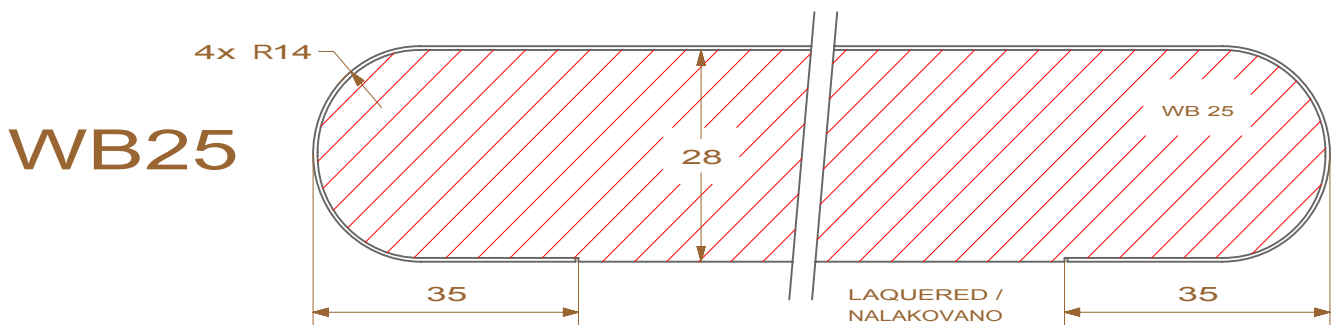


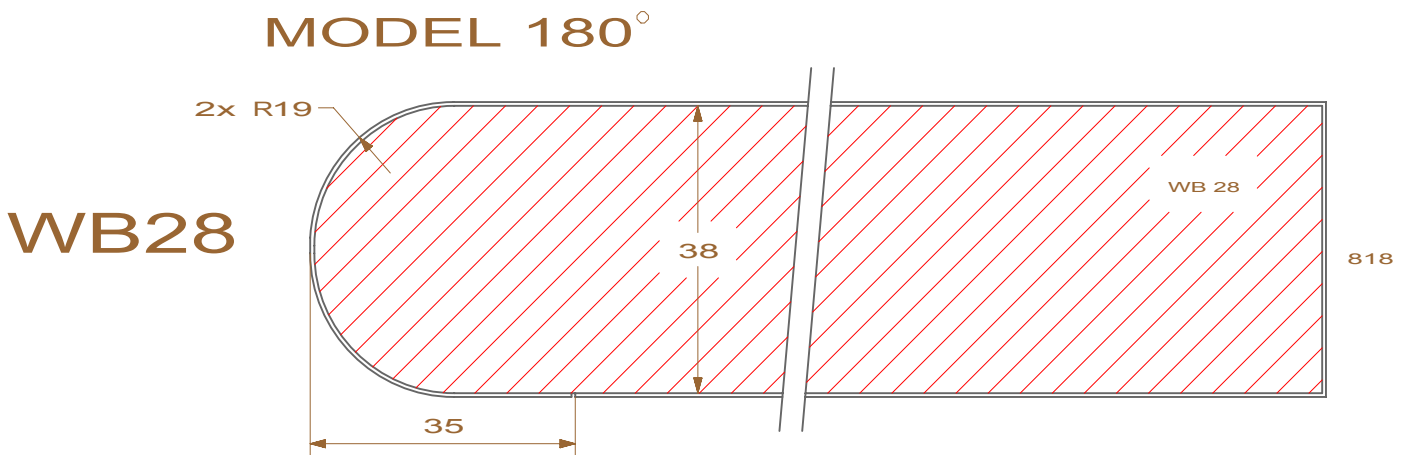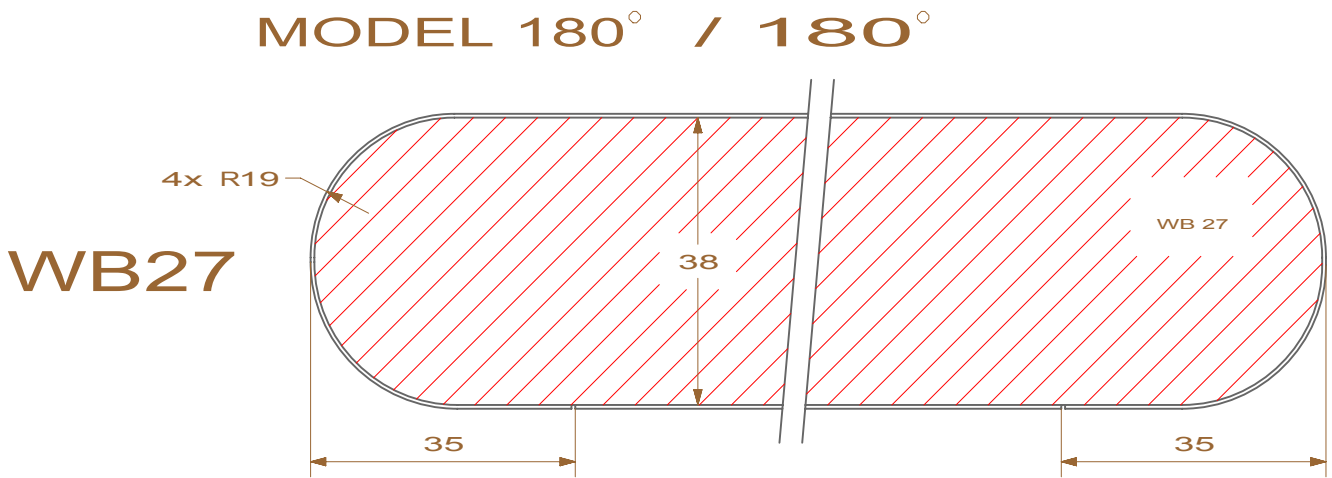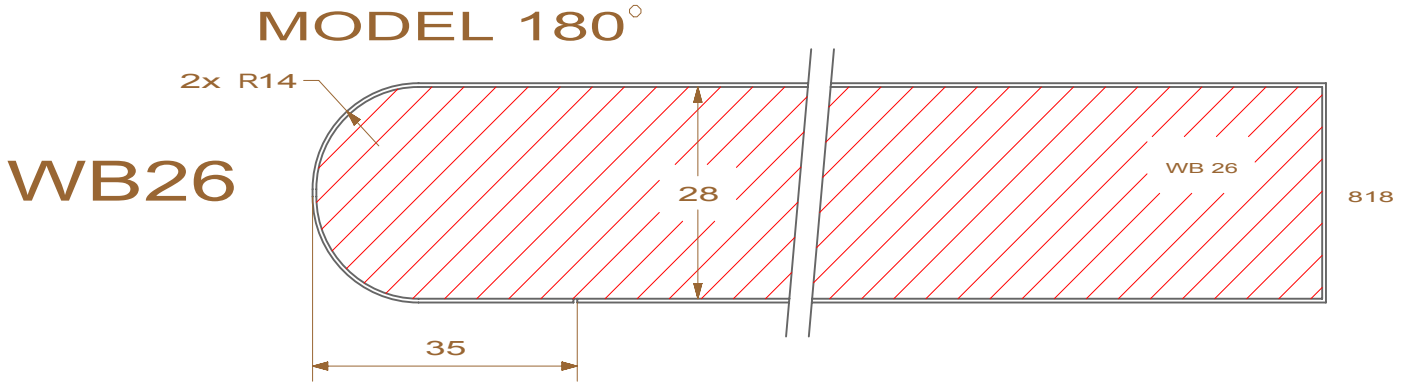


MODEL U

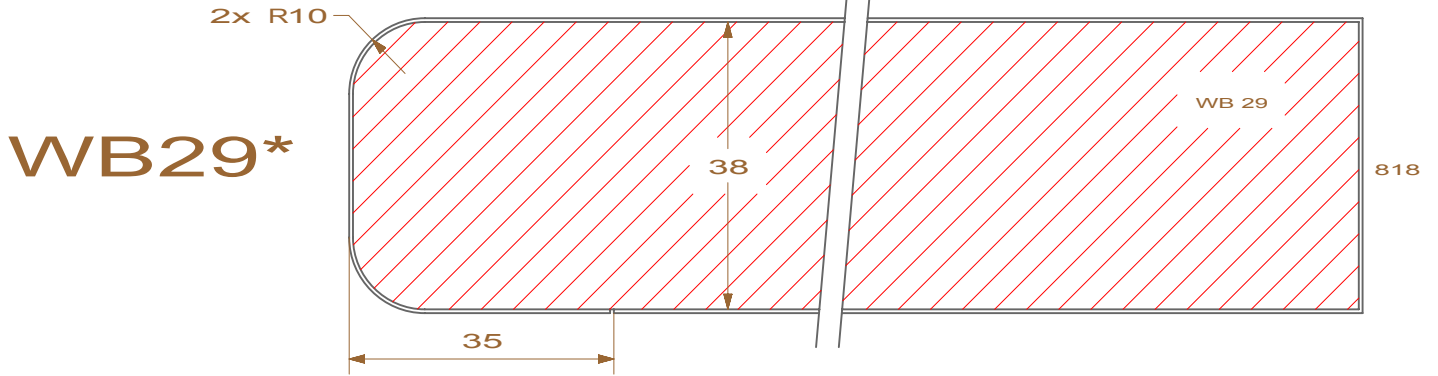

MODEL 180° / 180°

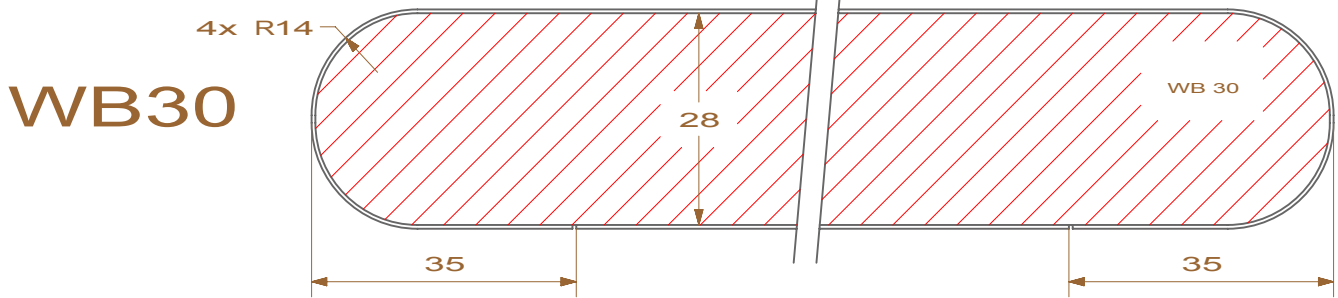


MODEL A

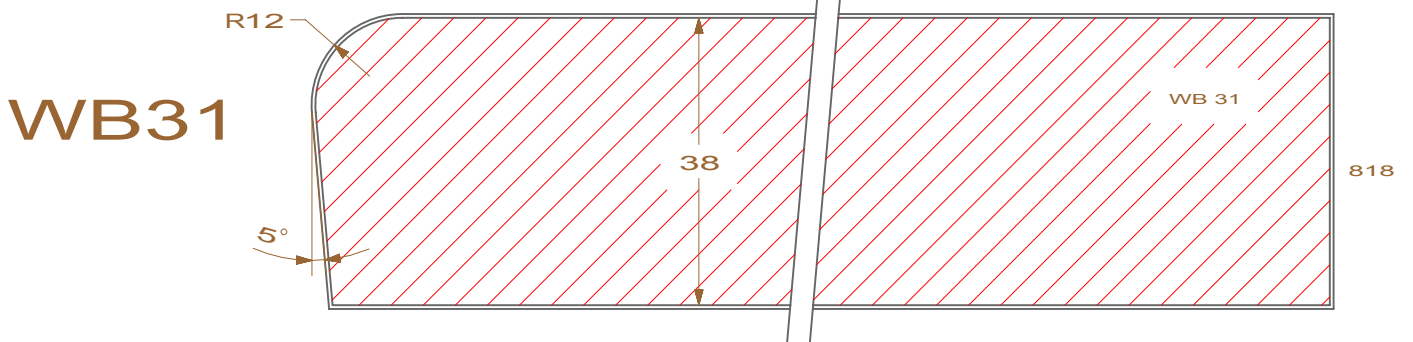


MODEL A

WB32

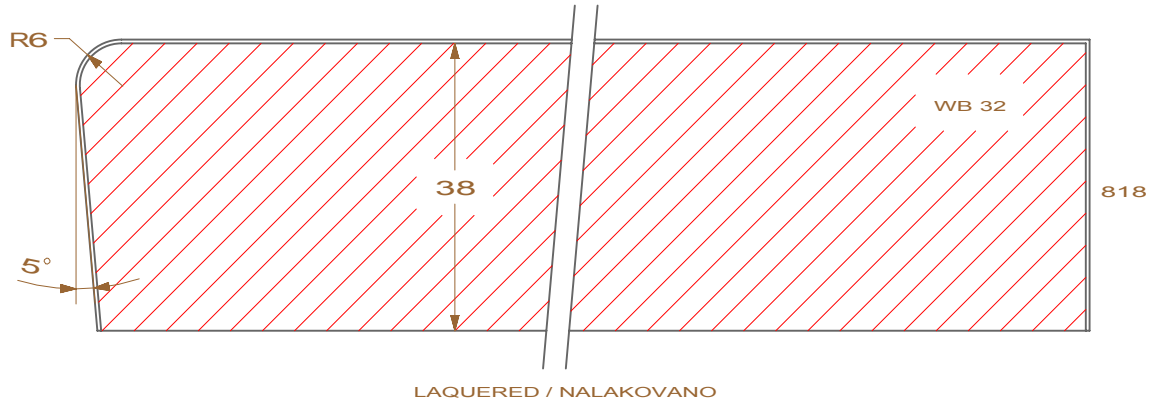


MODEL U




WB33

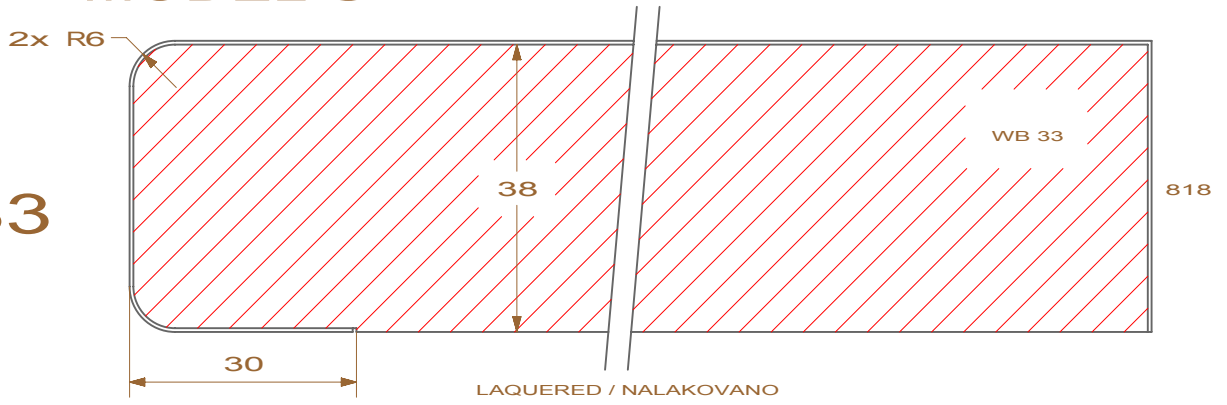

MODEL U / U


WB34

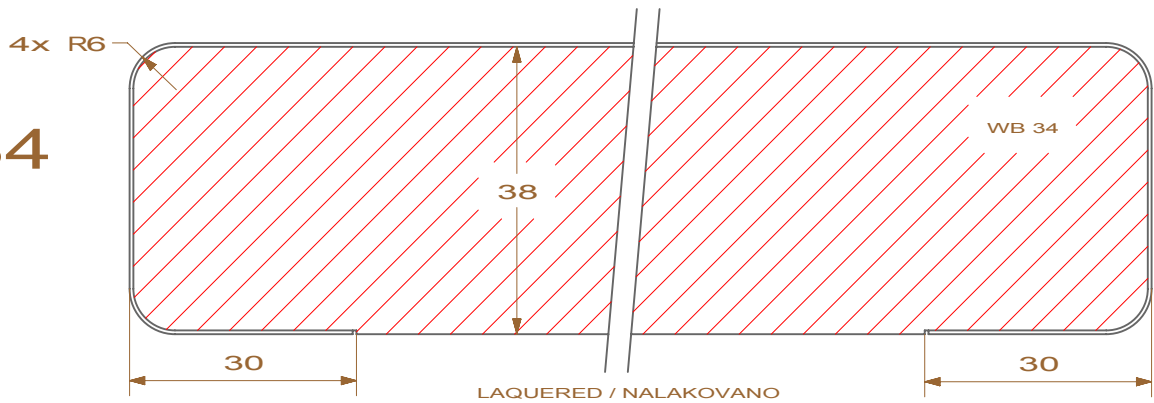

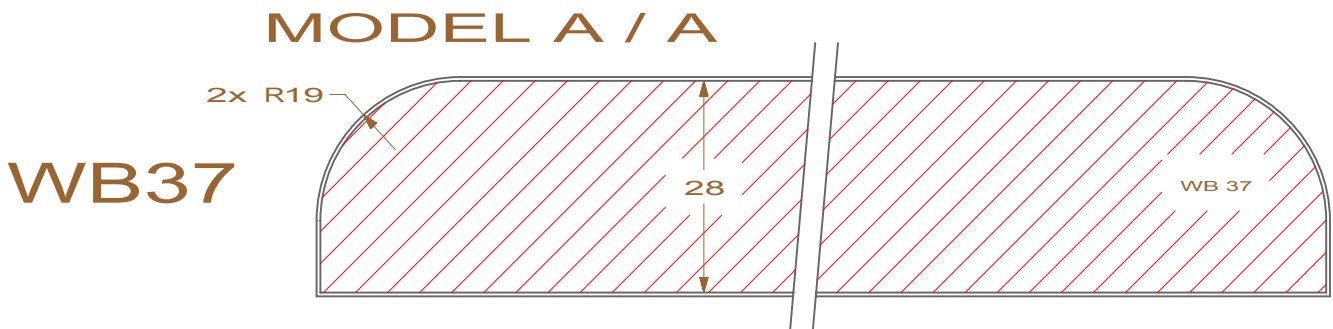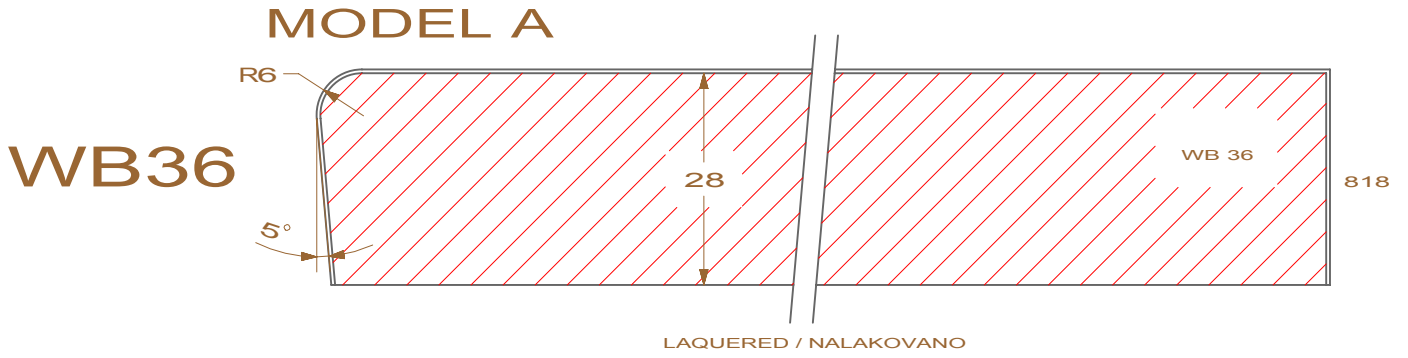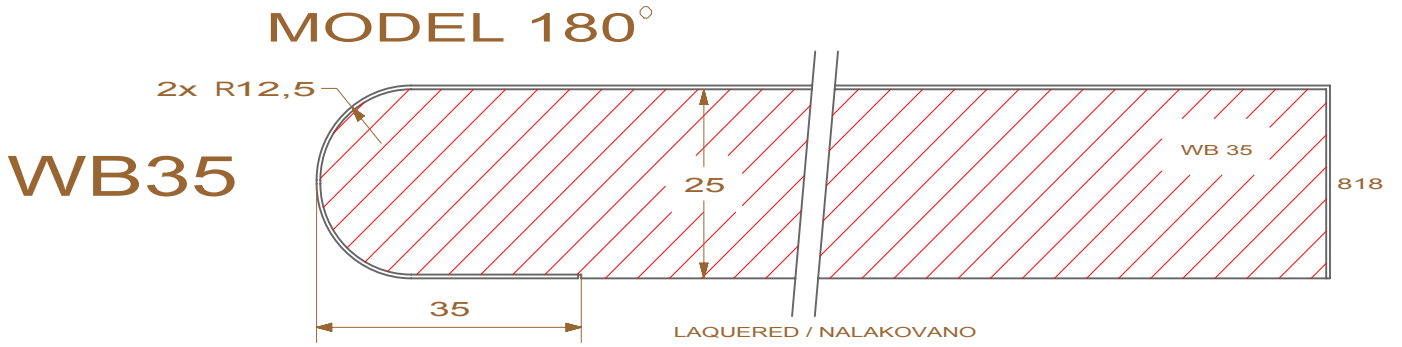


MODEL U

WB38

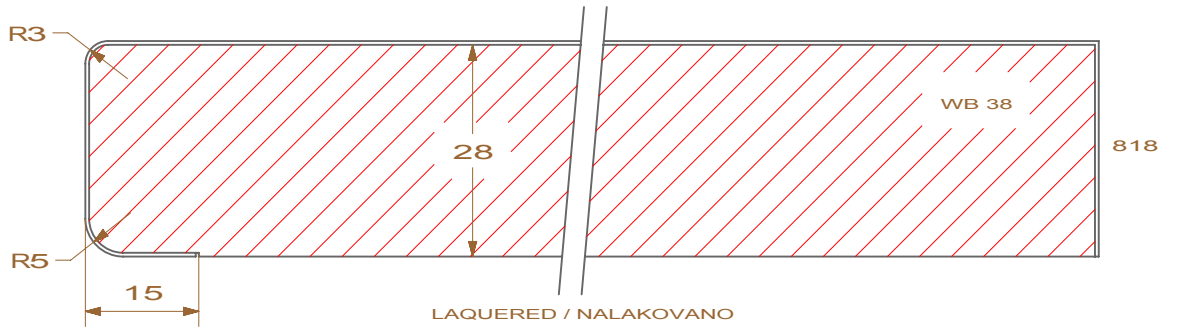


WB39

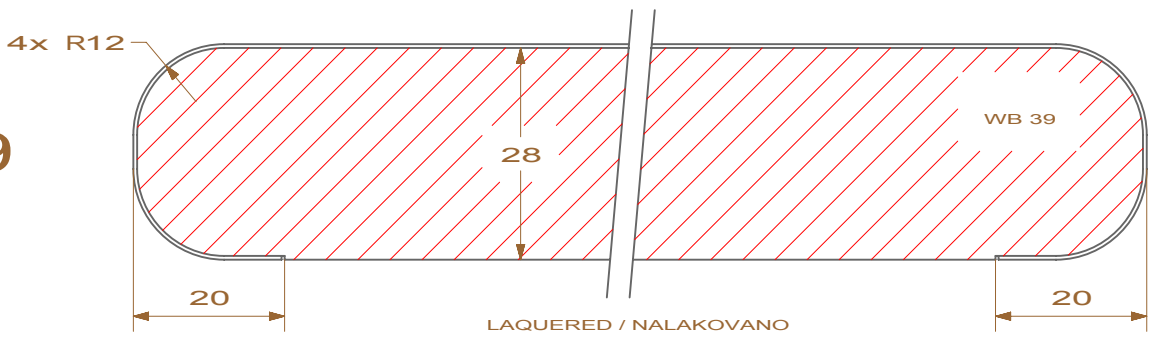

MODEL U

WB40

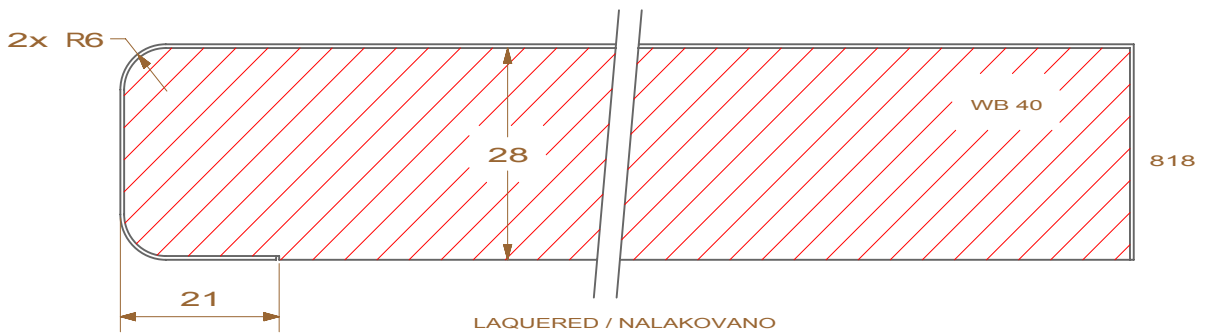

MODEL U / U

WB41

